


DURALINER™


1

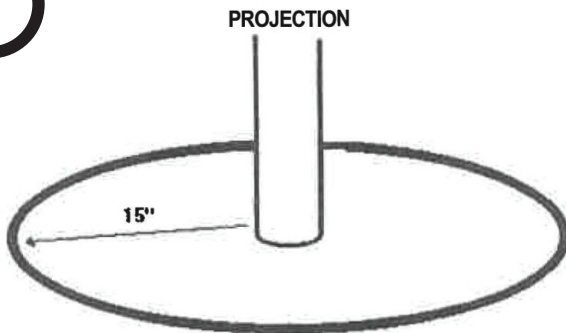

Clean and prepare surface 15" in all directions from the penetration.

Check with liner manufacturer to determine if any special preparations are required.

3

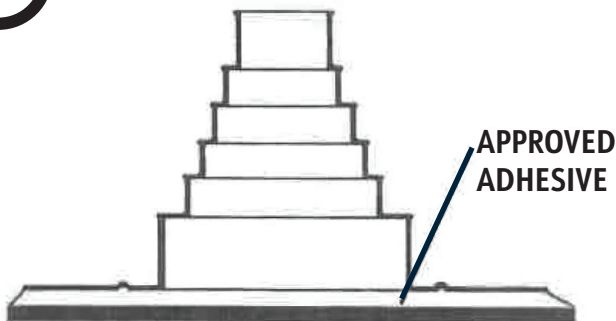


Apply liner manufacturers' specified adhesive on base flange of boot and place boot around projection.

Complete attachment of flashing to liner according to manufacturer's specification.

2

Cut above Index Ring

INDEX RING

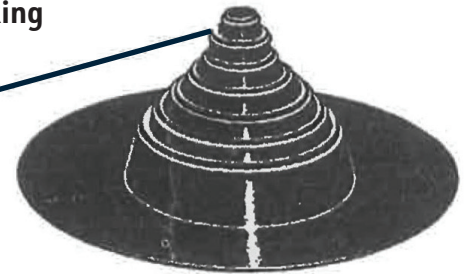


DO NOT CUT BELOW BOTTOM INDEX RING

Select proper step of the flashing and cut off above index ring.

REMEMBER: When in doubt, cut the smaller size. Clean and prime flange in accordance with liner manufacturer's recommendation.

4

SNAPLOCK
Stainless Steel
Clamp Band

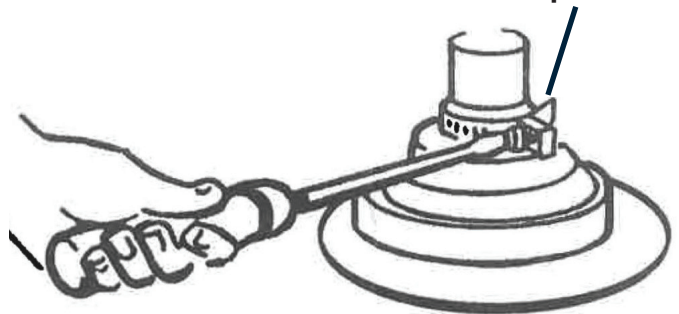

Using the stainless steel SnapLock clamp, place at top of boot and tighten to projection.